

Waterway Jets

The jets in the spa are:
Large adjustable
Large spinning
Jumbo adjustable
Jumbo adjustable
Super Spinning

To Open & close jets:

Large, Jumbo, and Super jets are opened when rotated counter clockwise and closed when rotated clockwise.

To remove large, jumbo, super jets:

- 1) Turn counter clockwise to open position.
- 2) Turn counter clockwise past opened position an additional ¼”.
- 3) Then pull jet out.

To insert large, jumbo, and super jets:

- 1) Line up the tab on the back of the jet with the grove in the jet housing
- 2) Push down gently until it snaps. There should not be any force or pressure in the snap
- 3) Turn clockwise with ease. If you turn clockwise and it feels tight, then you did not place the jet tab on the housing correctly. If that happens gently remove and try again.

To move a large spinning jet into the wide spinning position:

- 1) Position the crescent moon shape of the nozzle, at nine o'clock. (Diagram A)
- 2) Put your thumb in the center of the nozzle.
- 3) Press firmly up. (12 o'clock)

To move a large spinning jet into the narrow spinning position:

- 1) Position the crescent moon shape of the nozzle, at nine o'clock.
- 2) Put your thumb in the center of the nozzle.
- 3) Press firmly down. (Bringing the nozzle to the center)

To move a jumbo and super spinning jet into the wide spinning position:

- 1) Position the crescent moon shape of the nozzle, at six o'clock. (Diagram B)
- 2) Put your thumb in the center of the nozzle.
- 3) Press firmly to the right (3 o'clock).

To move a jumbo and super spinning jet into the narrow spinning position:

- 1) Position the crescent moon shape of the nozzle, at six o'clock.
- 2) Put your thumb in the center of the nozzle.
- 3) Press firmly to the left. (Bringing the nozzle to the center)

Diagram A

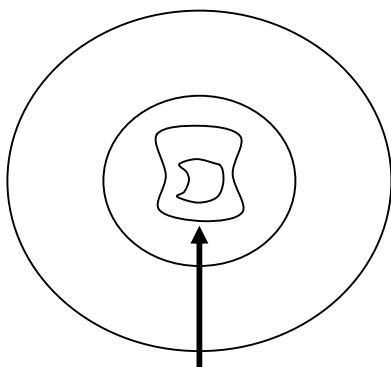


Diagram B

